

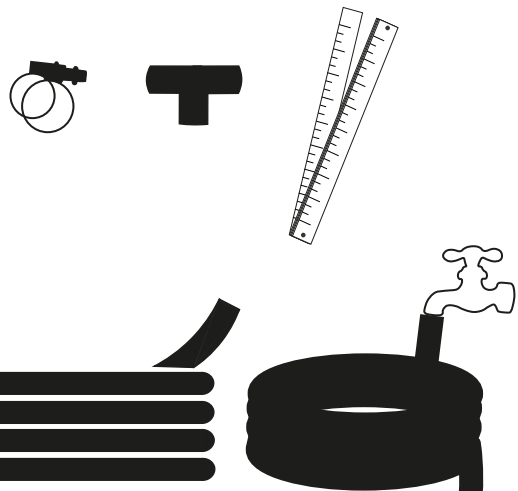
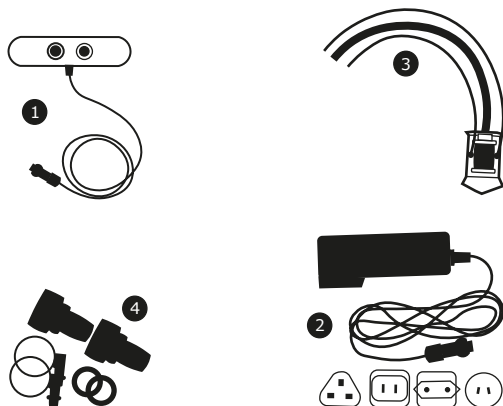
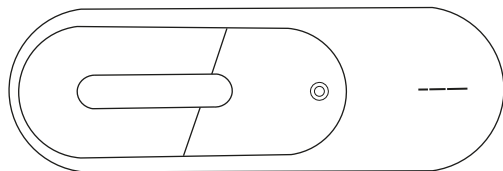
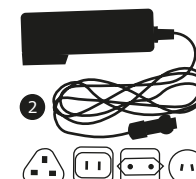
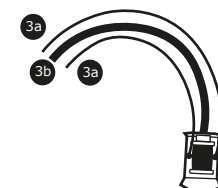
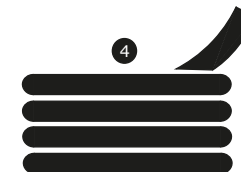
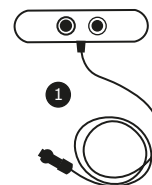


1

SENSOR/EXTENDER BUNDLE



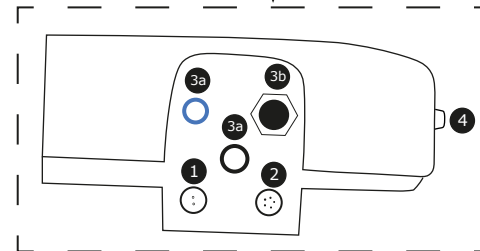


1




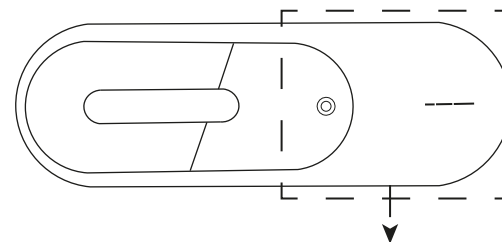


2




SMARTFILLER

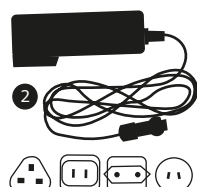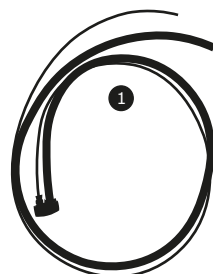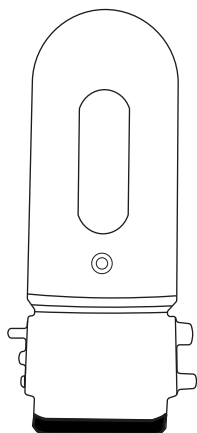


1

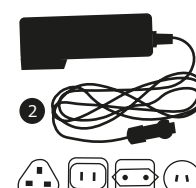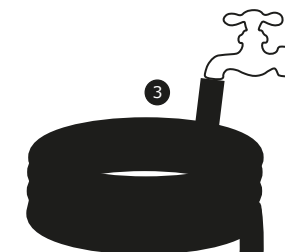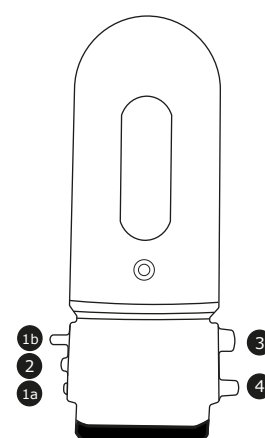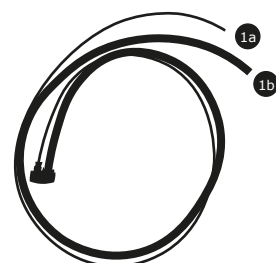



2

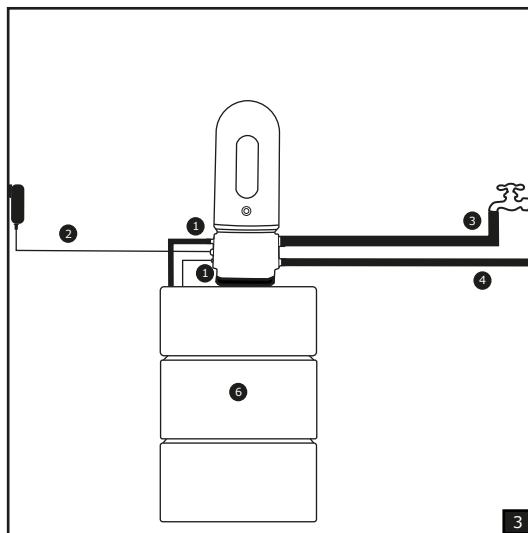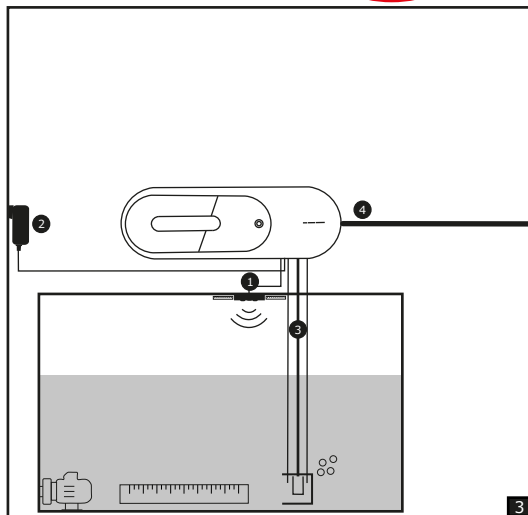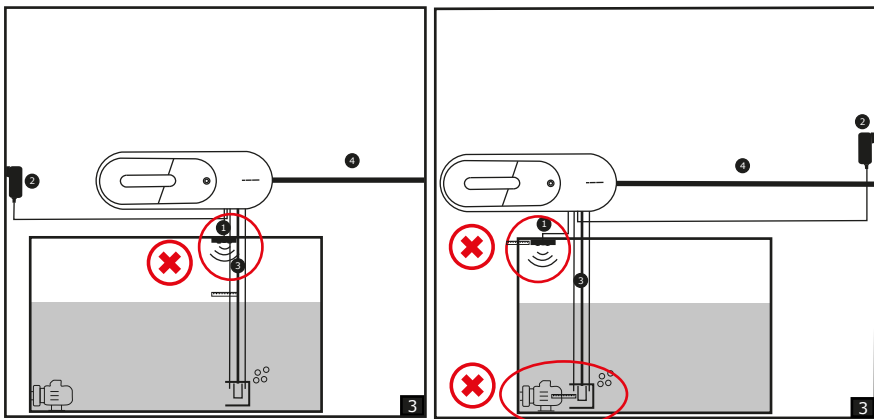


AutoPilot Single

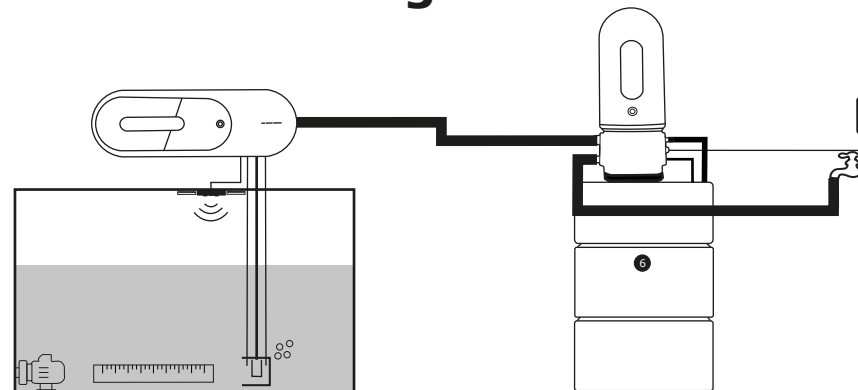


AutoPilot Multi

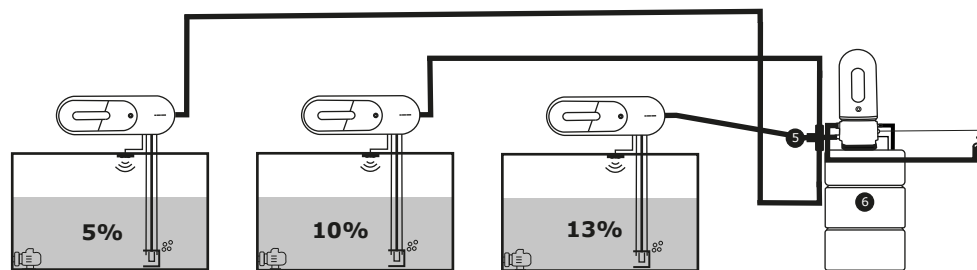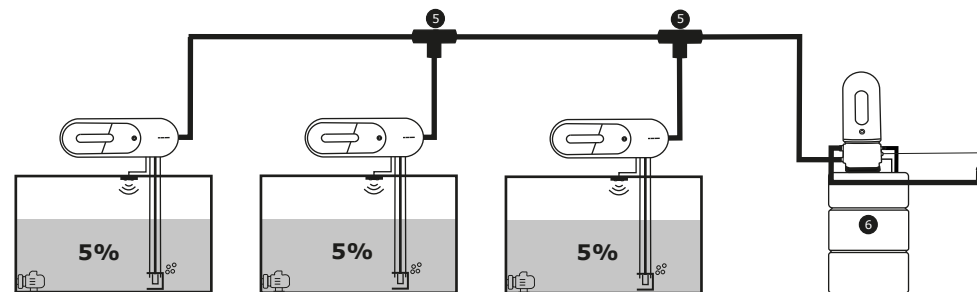


1. Add machine

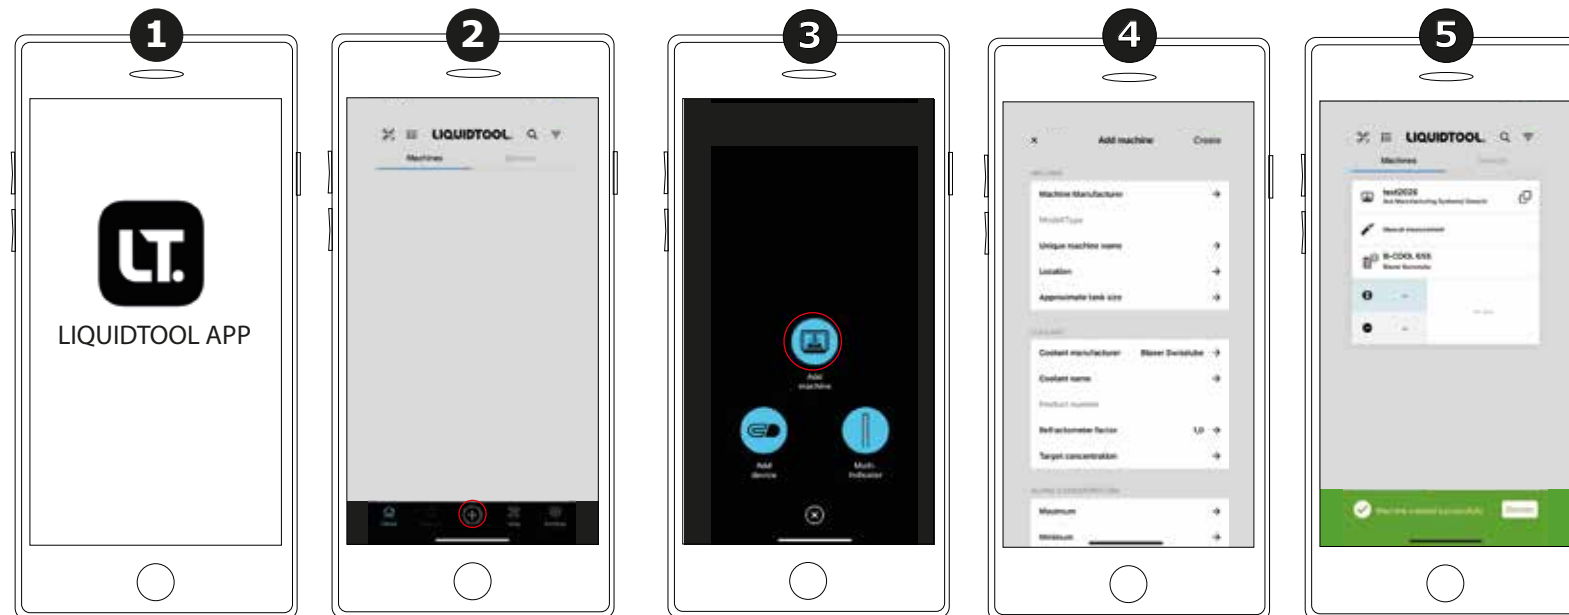

2. Initialize Sensor/Extender Wireless Lan

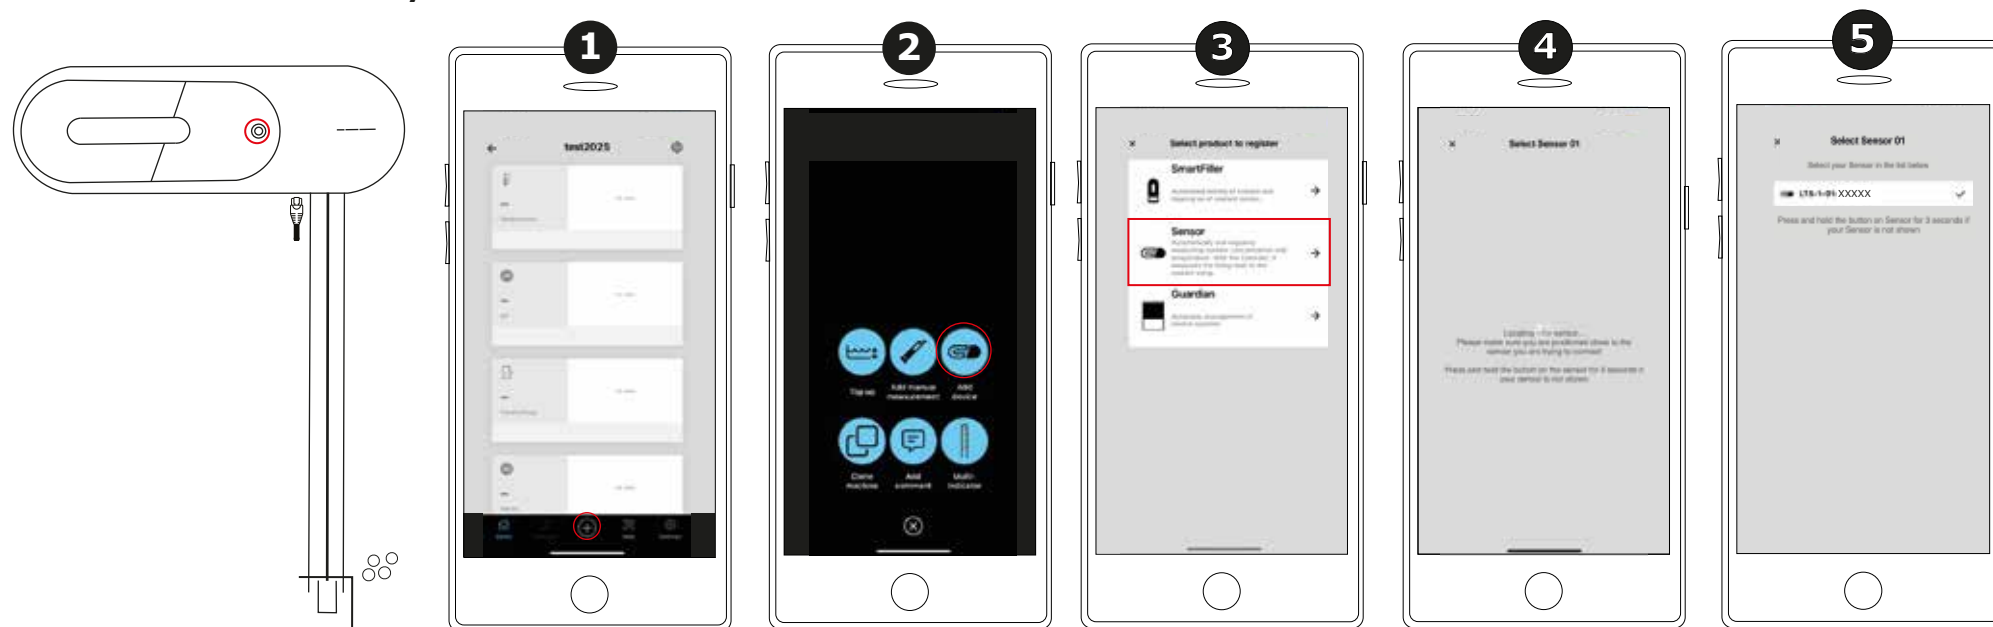



Wireless LAN

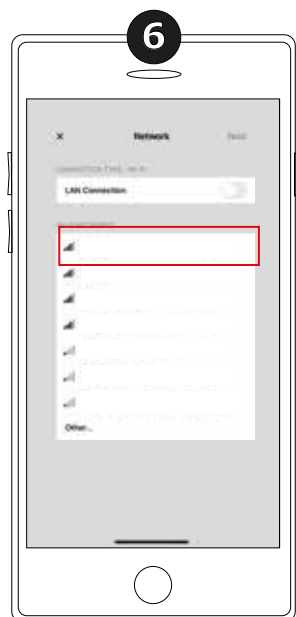




Ethernet Cable



OR

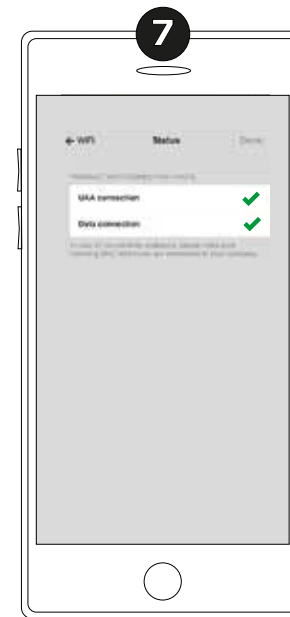
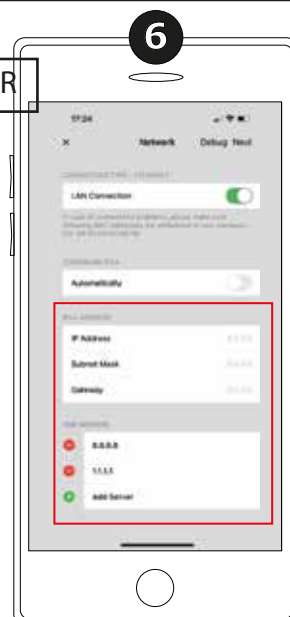


3. Initialize Extender

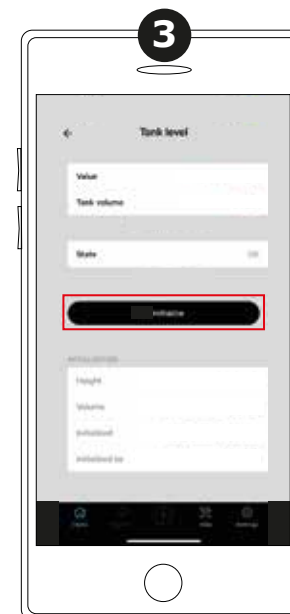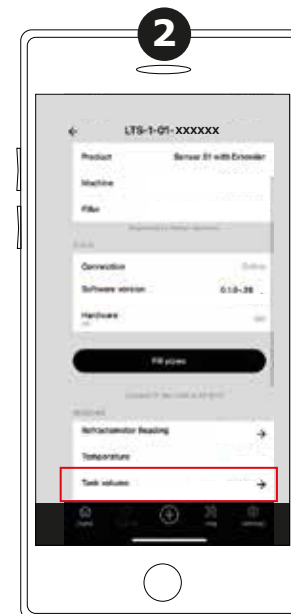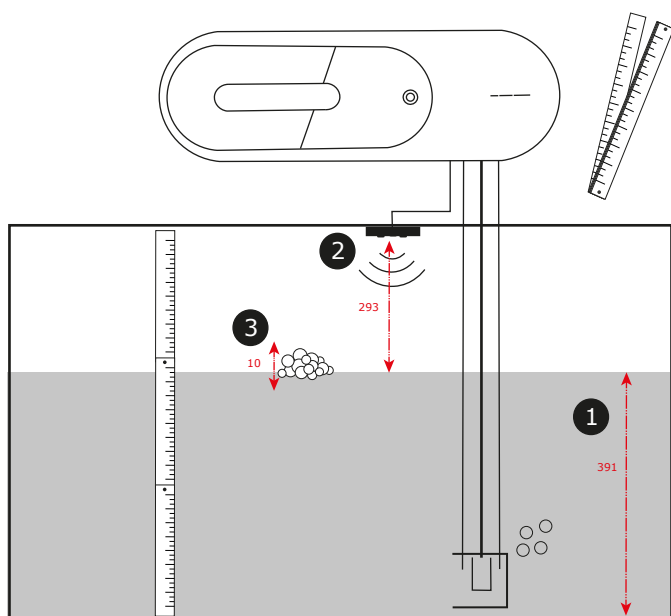



1. Install SmartFiller

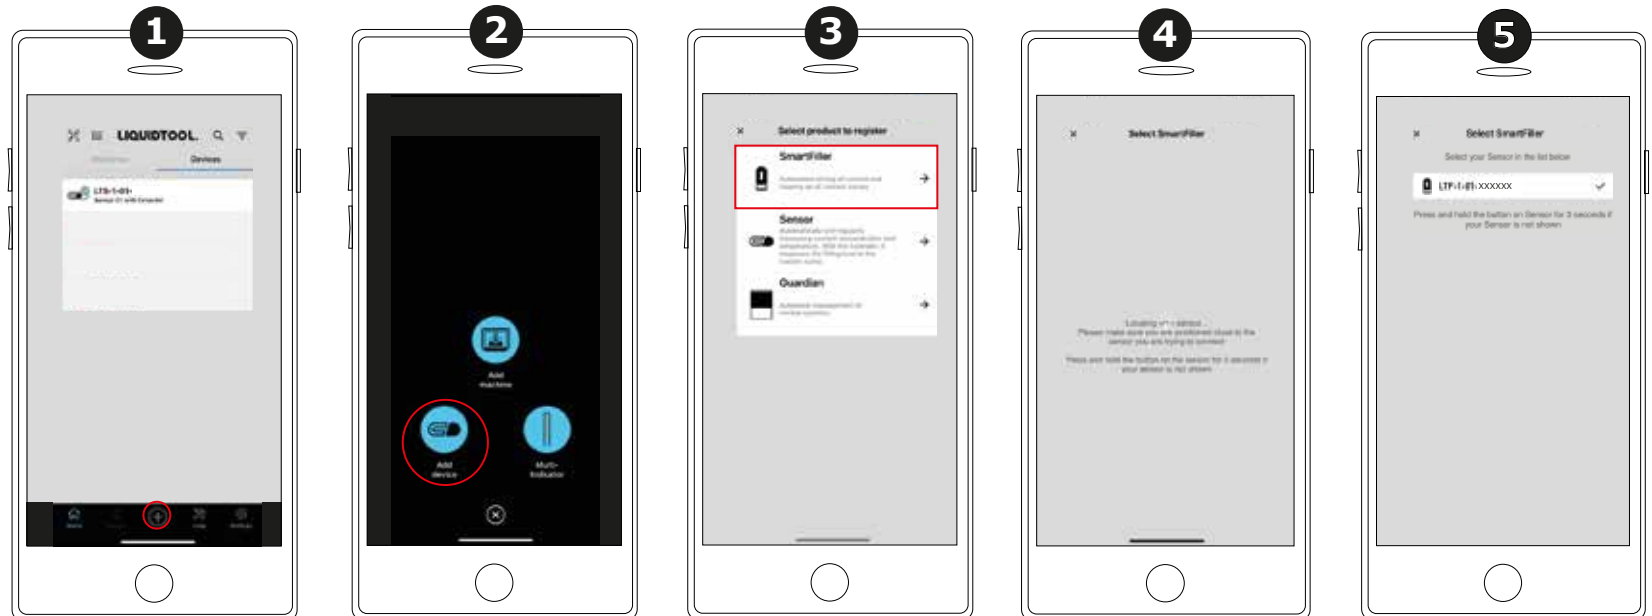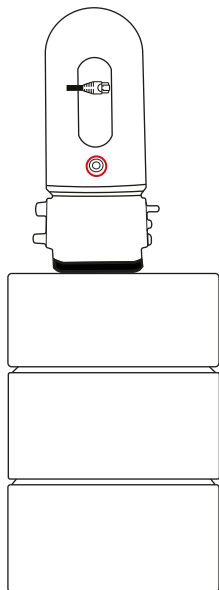


Wireless LAN





Ethernet Cable




OR

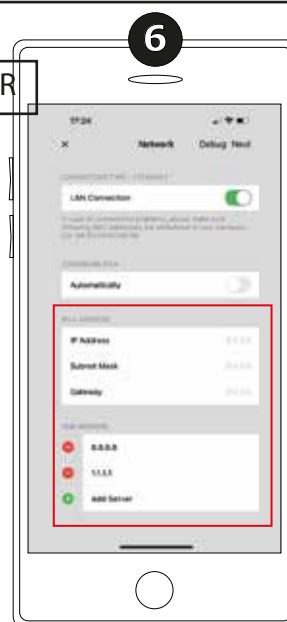


2. Initialize SmartFiller

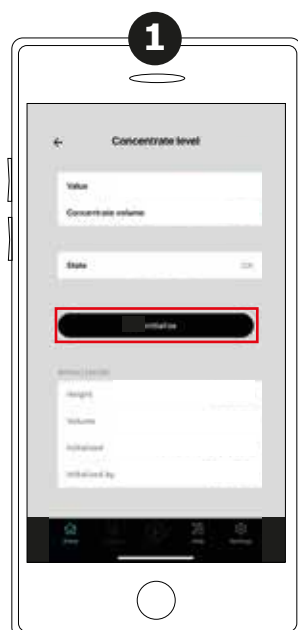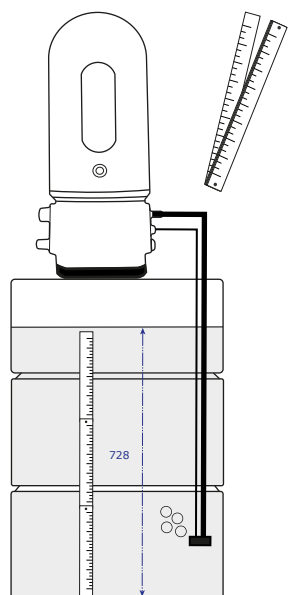

3. Add machine to SmartFiller

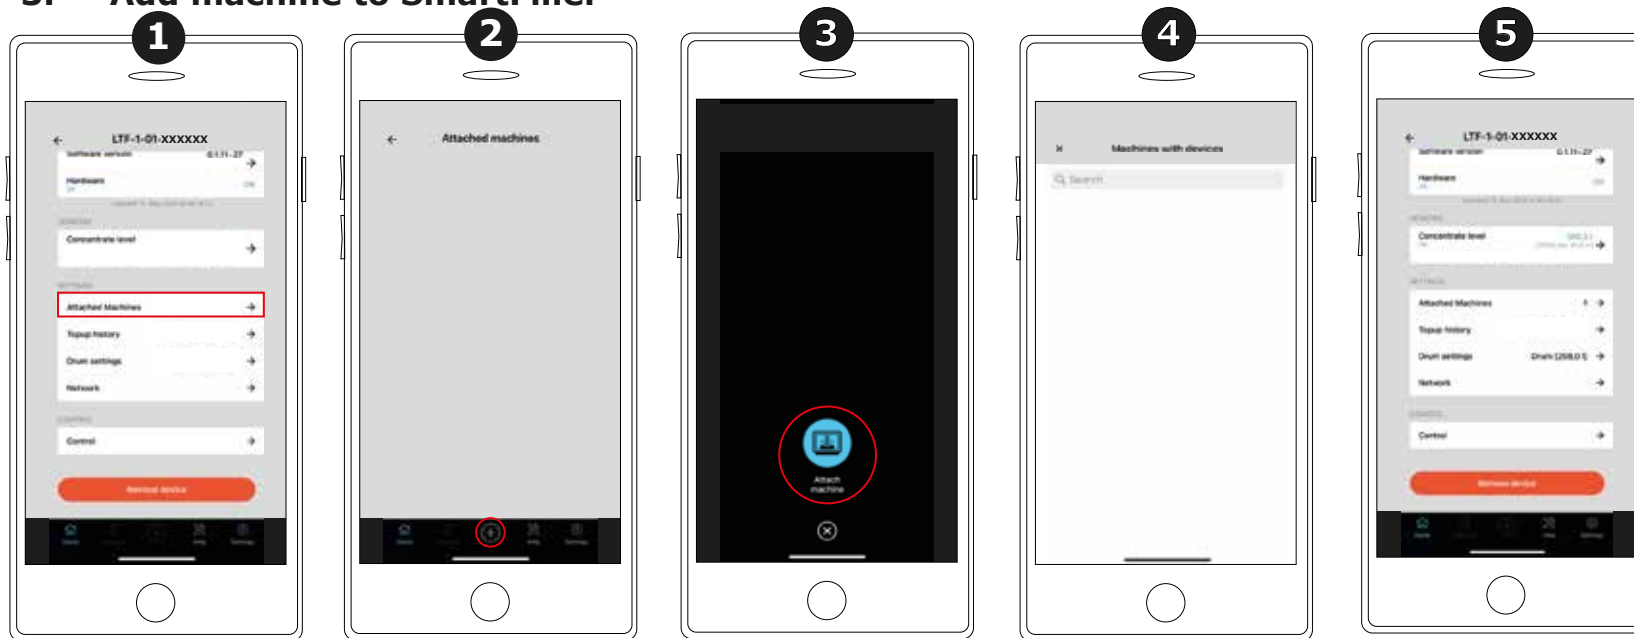

4. Fill pipes

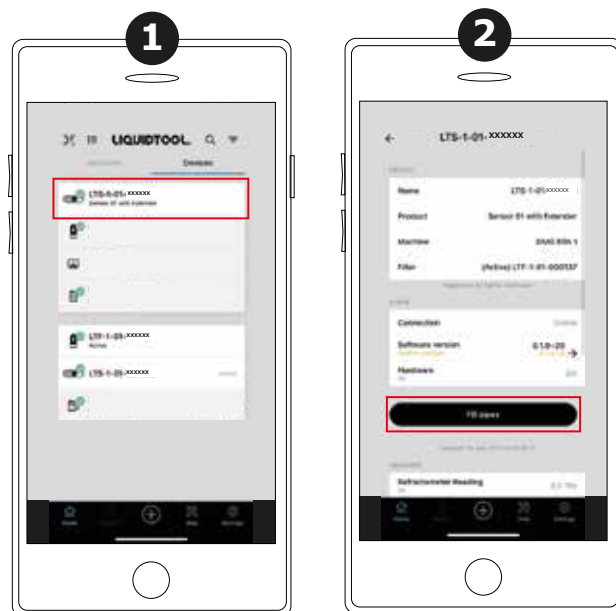

5. Top Up History

