

LIQUIDTOOL.




LIQUIDTOOL Sensor 01

Demounting and uninstallation
instruction


Demounting of Sensor 01

Dismount the Sensor device as follows:

1. Pull the NFC token off the machine tool and place it on the sensor. The magnets hold the Token in position.

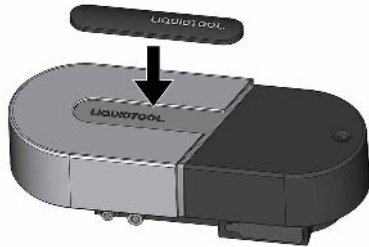


2. Remove the intake hose including the filter from the coolant tank.

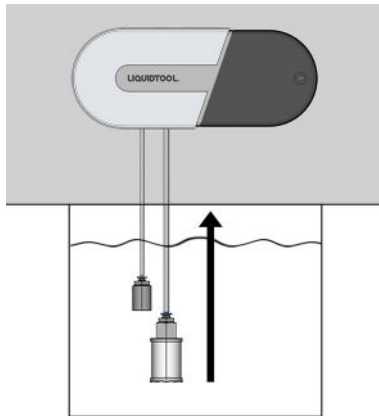


3. Press the connection button briefly

- A manual measurement will start, emptying the Sensor.
- After a few seconds, the pump should sound different due to dry running. This will indicate that there is no more coolant in the system.

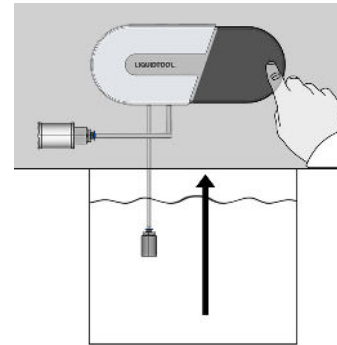

4. Unplug the power cord from the socket and remove the cable from the sensor.
5. Remove the two hose lines including filter and outlet weight. Clean them with a dry cloth.
6. Pull the sensor from its surface. Since it is attached with magnets, it can be pulled off with the reasonable force.

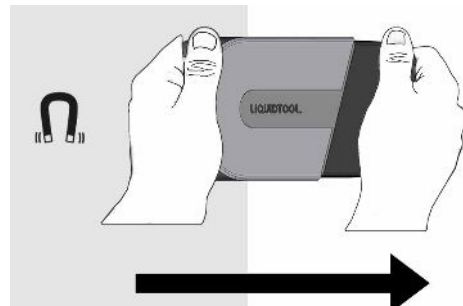

7. Pack the sensor and all accessories in a suitable box for shipping. If still available, please use the original packaging.
8. If the sensor was connected via a mobile router, uninstall and send it using the same box as the sensor, including its power supply.

Checklist for return shipping

- ☐ I have removed the NFC token and placed it on the sensor
- ☐ I have disposed of the hose lines as well as the filter and weight
- ☐ I have packed the sensor properly for shipping
- ☐ I have enclosed the mobile router incl. the cable and power supply unit